 
 
 



Installation Instructions - Stuart Water Conditioner C -

- No wiring
- No maintenance
- Can be installed horizontally or vertically
- Maximum pressure 10 bar
- Ensures compliance with part L, UK Building Regulations (Domestic heating compliance guide for hardwater treatment)

Installation is very simple and can be carried out by any competent pipe fitter.

1. Ensure water supply is switched off and pipe to be cut is drained. 
2. Remove pipework. See chart below. 
3. Fit the Stuart Water Conditioner ensuring the flow direction is correct (refer to label) and fittings are tight at both ends. 
4. Turn on supply slowly, checking for leaks as pressure is restored. 

Note: Supplementary equipotential bonding should be installed where necessary in accordance with the latest wiring regulations.

Once installed there are no further alterations needed and the Stuart Water Conditioner will not require servicing.

Water Conditioner model	Remove pipe length (approx)	Pipe fittings to suit
C3-22*	225 mm	15 mm or 22 mm
C23-45	250 mm	22 mm
C46-75	260 mm	28 mm

*Supplied with 22 mm compression fittings and 15 mm compression reducers

Stuart Turner reserve the right to amend the specification in line with its policy of continuous development of its products.

Issue No: 3022/02-02

Stuart Turner Ltd.
Henley-on-Thames
Oxfordshire
RG9 2AD England

Tel +44 (0) 1491 572655
Fax+44 (0) 1491 573704
info@stpumps.co.uk
www.stuart-turner.co.uk

Pt. No. 20498