


Top Fix Waste Instructions

Thank you for buying our patented product, we hope you will enjoy the easy installation.

Recommended items for installation:

1x 14mm Socket Tool (Supplied)

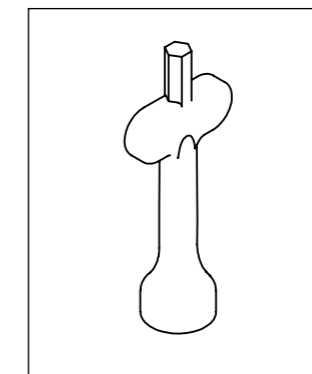

1. Remove the click clack from the waste.
2. Simply drop the waste in from above.
3. Place the Tool on the bolt and tighten the nut ensuring not to over tighten. (If using a power drill, we recommend a torque setting of 5 for optimal fitting.)
4. Job done.



CAUTION: IF A POWER DRILL IS USED DO NOT EXCEED TORQUE SETTING 5

TORQUE SETTINGS MAY VARY AS PER BRAND. TOOL PROVIDED IS PREFERRED.

FITS UNSLOTTED BASIN THICKNESSES OF 0.5MM TO 20MM
FITS SLOTTED BASIN THICKNESS OF ATLEAST 40MM

PATENTED ✓
TOP-FIX
WASTES & FIXINGS

